

Frame Coupling Detail

FIG. 1

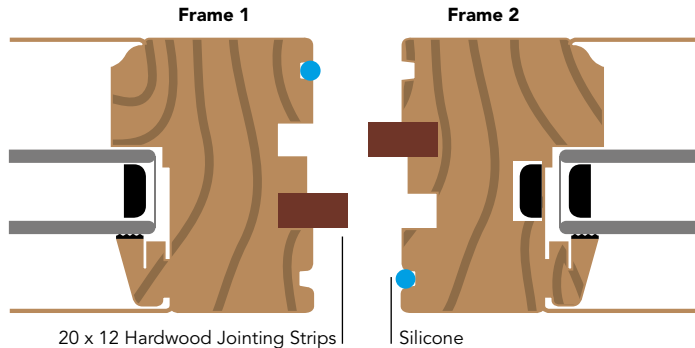


FIG. 2

Vertical Detail


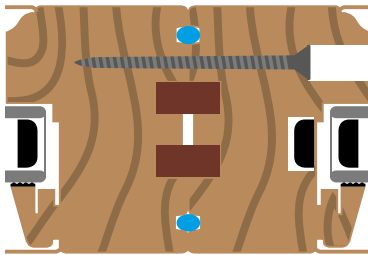


FIG. 3

Horizontal Detail

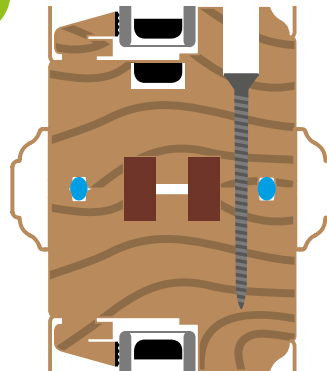

Frame Coupling Procedure

- Apply silicone to internal and external grooves as indicated in Fig 1.
- Insert jointing strips into central grooves.
- Couple frames together, drill countersunk hole and fix with appropriate length screw as Fig 2 & 3. Once fixed seal hole accordingly.
- Apply a coat of paint down the length of the joint to seal.
- If cover moulds are being used, cut to size, apply waterproof wood glue and fit with small panel pins punched home, fill nail hole and apply a coat of paint to the length and sides of covermoulds.



Heron Joinery[®]

Crafting Beauty & Warmth