



Frame Coupling Detail

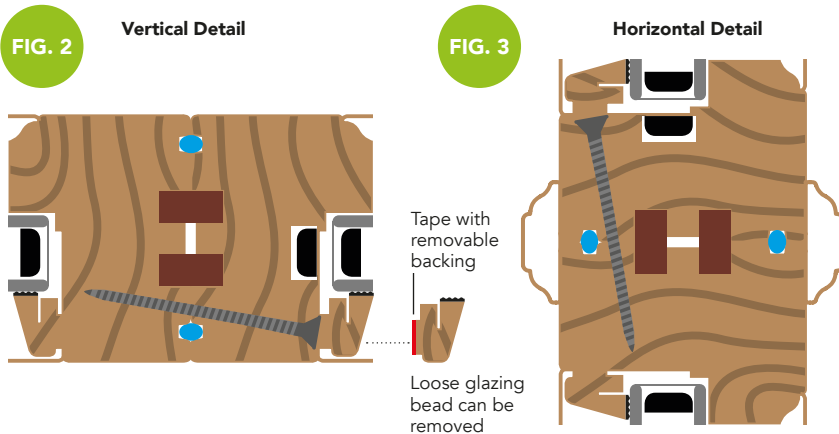

Frame Coupling Procedure

- Apply a suitable sealant and construction adhesive such as CT1 or similar.
- Insert jointing strips into central grooves.
- Couple frames together by removing the loose glazing bead. Drill a countersunk hole at an angle and fix with appropriate length screw as Fig 2 & 3.
- Once fixed, seal hole accordingly. Remove backing from tape on glazing bead tape and refix onto window
- If cover moulds are being used, cut to size, apply waterproof wood glue and fit with small panel pins punched home, fill nail hole and apply a coat of paint to the length and sides of covermoulds.

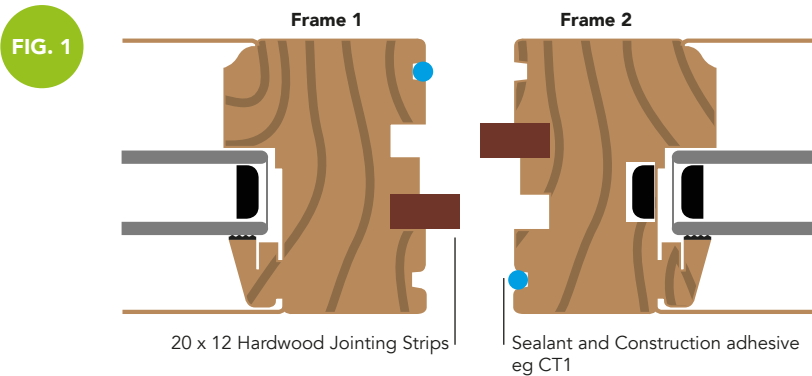

Heron Joinery[®]

Crafting Beauty & Warmth